


Proportional flow valves type QVHZO-A*, QVKZOR-A*

pressure compensated, direct operated, without position transducer, ISO 4401 size 06 and 10

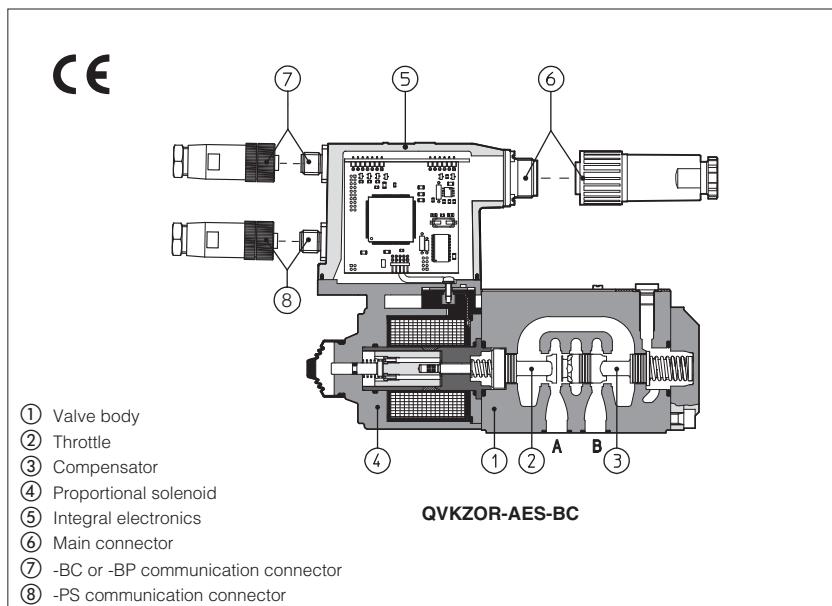

1 MODEL CODE

QVKZOR - AES - PS - 10 / 65 / * ** / *

Pressure compensated flow control valves
QVHZO = size 06
QVKZOR = size 10

A = without position transducer
AE = as A plus integral electronics
AES = as A plus integral digital electronics

Communication interfaces (only for AES):

PS = Serial (1)
BC = CANopen
BP = PROFIBUS DP

Valve size:

06 = ISO 4401, size 06 **10** = ISO 4401, size 10

Max regulated flow:

for **QVHZO**:

3 = 3,5 l/min **36** = 35 l/min
12 = 12 l/min **45** = 45 l/min
18 = 18 l/min

for **QVKZOR**:

65 = 65 l/min
90 = 90 l/min

Synthetic fluids
WG = water-glycol
PE = phosphate ester
Series number

Options for -A execution, see section 5:

6 = with 6 V_{DC} coil instead of standard 12 V_{DC} coil
18 = with 18 V_{DC} coil instead of standard 12 V_{DC} coil
D = quick venting
N = manual micrometric adjustment
NV = as N plus handwheel and graduated scale

Electronics options for -AE execution, see section 7:

I = current reference (4÷20 mA)
Q = enable signal

Electronics options for -AES execution, see section 9:

Q = enable signal
Z = double power supply, enable fault and monitor (12 pin connector)
W = power limitation function (12 pin connector) see section 10.3

QVHZO and QVKZOR are 2 or 3 flow proportional valves, direct operated without position transducer, which provide compensated flow control according to the electronic reference signal.

They operate in association with electronic drivers, see section 2 which supply the proportional valves with correct current signal to align valve regulation to the reference signal supplied to the electronic driver.

They are available in different executions:

- -A, without position transducer;
- -AE, -AES, as -A plus analogue (AE) or digital (AES) integral electronics;

The flow is controlled by a throttle ②, directly operated by the proportional solenoid ④. The mechanical pressure compensator ③ keeps a constant ΔP across the throttle ①, thus the regulated flow is independent to the load conditions.

The integral electronics ⑤ ensures factory presetting, fine functionality plus valve-to-valve interchangeability and simplified wiring and installation.

The electronic main connector ⑦ is fully interchangeable for -AE and -AES executions. Standard 7 pin connector is used for power supply, analog input reference and monitor signals.

12 pin connector is used for option /Z (AES).

Following communication interfaces ⑧ are available for the digital -AES execution:

- standard -PS, Serial communication interface for configuration, monitoring and firmware updating through Atos PC software - always present
- optional -BC, CANopen interface
- optional -BP, PROFIBUS DP interface

The valves with -BC and -BP interfaces can be integrated into a fieldbus communication network and thus digitally operated by the machine control unit.

The coils are fully plastic encapsulated (insulation class H) and valves have anti-vibration, antishock and weather-proof features.

Surface mounting: ISO 4401, size 06 and 10. Max flow respectively up to:

QVHZO = 45 l/min

QVKZOR = 90 l/min



Max pressure = 210 bar

2 ELECTRONIC DRIVERS FOR QVHZO AND QVKZOR

| Valve model | -A | | | | -AE | -AES |
|---------------|-------------|-------------|-------------|-------------|---------|----------|
| Drivers model | E-MI-AC-01F | E-BM-AC-01F | E-ME-AC-01F | E-RP-AC-01F | E-RI-AE | E-RI-AES |
| Data sheet | G010 | G025 | G035 | G100 | G110 | G115 |

Note: (1) Serial interface always present, also for -BC and -BP options

3 HYDRAULIC CHARACTERISTICS (based on mineral oil ISO VG 46 at 50 °C)
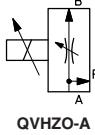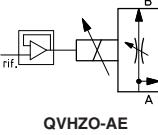
| | | | | | | | |
|---|--|--|---------|----|-----|-------|---------|
| Hydraulic symbols |  QVHZO-A QVKZOR-A |  QVHZO-AE QVKZOR-AE | | | | | |
| Note: In three-way versions port P is open. In two-way versions port must be plugged. Port T must always be plugged. | | | | | | | |
| Valve model | QVHZO-A*-06 | QVKZOR-A*-10 | | | | | |
| Max regulated flow [l/min] | 3,5 | 12 | 18 | 35 | 45 | 65 | 90 |
| Min regulated flow (1) [cm³/min] | 15 | 20 | 30 | 50 | 60 | 85 | 100 |
| Regulating Δp [bar] | 4 - 6 | | 10 - 12 | | 15 | 6 - 8 | 10 - 12 |
| Max flow on port A [l/min] | 40 | | 35 | 50 | 55 | 70 | 100 |
| Max pressure [bar] | | | 210 | | | | |
| Response time 0÷100% step signal (2) [ms] | | 30 | | | 45 | | |
| Hysteresis [% of the regulated max flow] | | ≤ 5 | | | ≤ 5 | | |
| Linearity [% of the regulated max flow] | | ≤ 3 | | | ≤ 3 | | |
| Repeatability [% of the regulated max flow] | | ≤ 1 | | | ≤ 1 | | |

Notes: Above performance data refer to valves coupled with Atos electronic drivers, see sections 2.

(1) Values are referred to 3-way configuration. In the 2-way configuration, the values of min regulated flow are higher.

(2) Response times at step signal (0%→100%) are measured from 10% to 90% of step value and are strictly referred to the valve regulation.

4 GENERAL NOTES

QVHZO and QVKZOR proportional valves are CE marked according to the applicable Directives (e.g. Immunity/Emission EMC Directive and Low Voltage Directive). Installation, wirings and start-up procedures must be performed according to the general prescriptions shown in table F003 and in the installation notes supplied with relevant components.

The electrical signals of the valve (e.g. monitor signals) must not be directly used to activate safety functions, like to switch-ON/OFF the machine's safety components, as prescribed by the European standards (Safety requirements of fluid technology systems and components-hydraulics, EN-982).

5 OPTIONS FOR -A EXECUTION

5.1 Option /6 6 Vdc coil instead of standard 12 Vdc, to be used in case of power supply 12 Vdc

5.2 Option /18 18 Vdc coil instead of standard 12 Vdc, to be used with electronic drivers not supplied by Atos


5.3 Option /D This option provides a quick venting of the user line when the valve is closed or de-energized.

The following options allow to operate the valve in absence of electrical power supply by means of a micrometric screw replacing the standard solenoid manual override, see table K500

5.4 Option /N manual micrometric adjustment

5.5 Option /NV as N plus handwheel and graduated scale

6 CONNECTION FOR -A EXECUTION
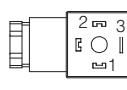
| SOLENOID POWER SUPPLY CONNECTOR | | |
|---------------------------------|--------------------|---|
| PIN | Signal description | |
| 1 | SUPPLY |  |
| 2 | SUPPLY | |
| 3 | GND | |

7 ANALOG INTEGRAL DRIVERS -AE - OPTIONS

Standard driver execution provides on the 7 pin main connector:

Power supply - 24Vdc must be appropriately stabilized or rectified and filtered; a 2,5 A safety fuse is required in series to the driver power supply.
Apply at least a 10000 µF/40 V capacitance to single phase rectifiers or a 4700 µF/40 V capacitance to three phase rectifiers

Reference input signal - analog differential input with 0÷+10Vdc nominal range (pin D,E), proportional to desired coil current

Monitor output signal - analog output signal proportional to the actual valve's coil current (1V monitor = 1A coil current)

Following options are available to adapt standard execution to special application requirements:

7.1 Option /I


It provides the 4÷20 mA current reference signal instead of the standard 0÷+10 Vdc. Monitor output signal is still the standard 0÷+10Vdc.
It is normally used in case of long distance between the machine control unit and the valve or where the reference signal can be affected by electrical noise; the valve functioning is disabled in case of reference signal cable breakage.

7.2 Option /Q

It provides the possibility to enable or disable the valve functioning without cutting the power supply (the valve functioning is disabled but the driver current output stage is still active). To enable the driver supply a 24Vdc on the enable input signal.

7.3 Possible combined option: /IQ

8 ANALOG INTEGRAL DRIVERS -AE - MAIN FUNCTIONS AND ELECTRONIC CONNECTIONS

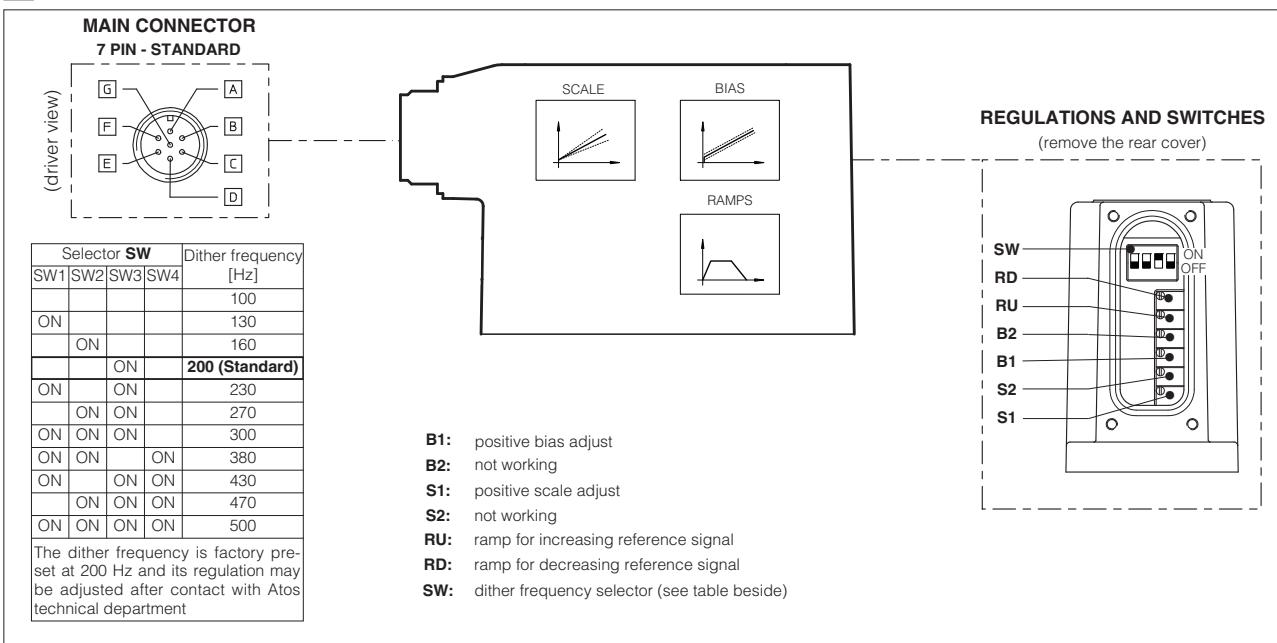

8.1 ELECTRONIC CONNECTIONS - 7 PIN MAIN CONNECTORS

| PIN | SIGNAL | TECHNICAL SPECIFICATIONS | NOTES |
|------------------|---------|--|------------------------|
| A | V+ | Power supply 24 Vdc for solenoid power stage and driver logic | Input - power supply |
| B | V0 | Power supply 0 Vdc for solenoid power stage and driver logic | Gnd - power supply |
| C ⁽¹⁾ | AGND | Ground - signal zero for MONITOR signal | Gnd - analog signal |
| | ENABLE | Enable (24 Vdc) or disable (0 Vdc) the driver (for /Q option) | Input - on/off signal |
| D | INPUT+ | Reference analog differential input: ±10 Vdc maximum range (4 ÷ 20 mA for /I option) | Input - analog signal |
| E | INPUT - | Default setting for single solenoid valves: 0÷+10 Vdc | |
| F | MONITOR | Monitor analog output: 0÷+5 Vdc maximum range; 1 V = 1 A | Output - analog signal |
| G | EARTH | Internally connected to the driver housing | |

Note: (1) with /Q option ENABLE signal replaces AGND on pin C; MONITOR signal is referred to pin B.

A minimum time of 60ms to 160ms have to be considered between the driver energizing with the 24 Vdc power supply and when the valve is ready to operate. During this time the current to the valve coils is switched to zero

9 DIGITAL INTEGRAL DRIVERS -AES - OPTIONS

Standard driver execution provides on the 7 pin main connector:

Power supply - 24Vdc must be appropriately stabilized or rectified and filtered; a 2,5 A safety fuse is required in series to each driver power supply
Apply at least a 10000 µF/40 V capacitance to single phase rectifiers or a 4700 µF/40 V capacitance to three phase rectifiers.

Reference input signal - analog differential input with 0÷+10 Vdc nominal range (pin D, E), proportional to desired coil current (4÷20 mA with cable break detection, ±10 mA, ±20 mA or 0÷20 mA software selectable)

Monitor output signal - analog output signal proportional to the actual valve's coil current (1V monitor = 1A coil current)

Following options are available to adapt standard execution to special application requirements:

9.1 Option /Q

To enable the driver, supply 24Vdc on pin C referred to pin B: when the enable signal is set to zero the valve status is software selectable, by factory default the valve functioning is disabled (zero current to the solenoid) but the driver current output stage is still active. For the complete list of selectable status, see tab. G115.

9.2 Option /Z

It provides, on the 12 pin main connector, the following additional features:

Logic power supply

Separated power supply for the solenoid (pin 1, 2) and for the digital electronic circuits (pin 9, 10).

Cutting solenoid power supply allows to interrupt the valve functioning but keeping energized the digital electronics thus avoiding fault conditions of the machine fieldbus controller. This condition allows to realize safety systems in compliance with European Norms EN13849-1 (ex EN954-1).

Enable Input Signal

To enable the driver, supply 24Vdc on pin 3 referred to pin 2: when the enable signal is set to zero the valve status is software selectable, by factory default the valve functioning is disabled (zero current to the solenoid) but the driver current output stage is still active. For the complete list of selectable status, see tab. G115.

Fault Output Signal

Fault output signal indicates fault conditions of the driver (solenoid short circuits/not connected, reference signal cable broken for 4÷20mA input, etc.). Fault presence corresponds to 0 Vdc, normal working corresponds to 24Vdc (pin 11 referred to pin 2): Fault status is not affected by the Enable input signal.

9.3 Option /W

It provides, on the 12 pin main connector, the above option /Z features plus the hydraulic power limitation function.


The driver receives the flow reference signal by the analog external input INPUT+ and a pressure transducer remotely installed in the hydraulic system, has to be connected to the driver's analog input TR.

When the actual requested hydraulic power $p \times Q$ (TR x INPUT+) reaches the max power limit ($p_{1x}Q_1$), internally set by software, the driver automatically reduces the flow regulation of the valve. The higher is the pressure feedback the lower is the valve's regulated flow:

$$\text{Flow regulation} = \text{Min} \left(\frac{\text{PowerLimit [sw setting]}}{\text{Transducer Pressure [TR]}}, \text{Flow Reference [INPUT+]} \right)$$

For detailed information on hydraulic power limitation, see tab. G115

10 DIGITAL INTEGRAL DRIVERS -AES - MAIN FUNCTIONS AND ELECTRONIC CONNECTIONS

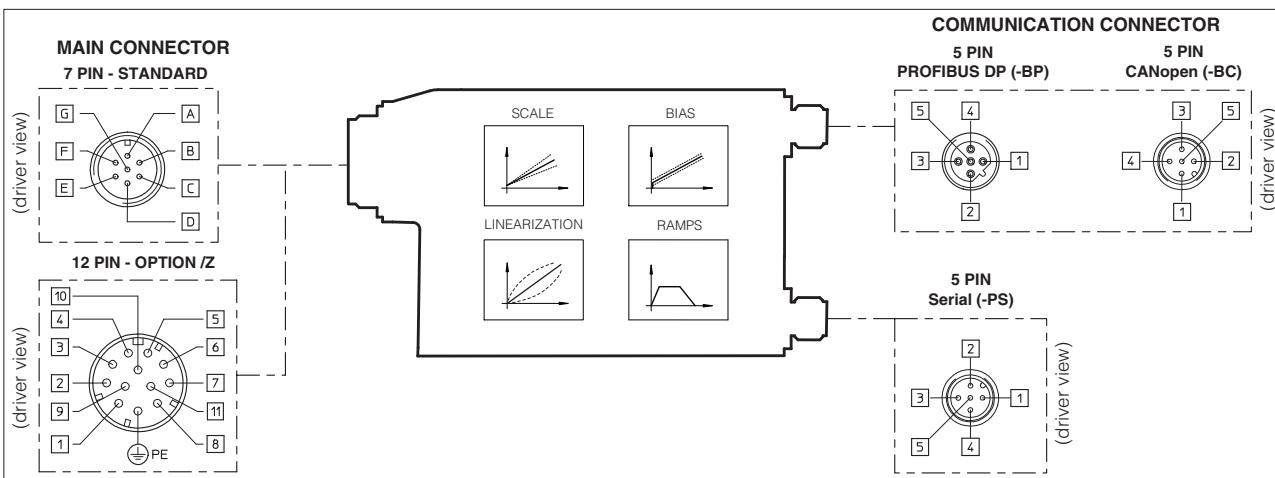

10.1 ELECTRONIC CONNECTIONS - 7 & 12 PIN MAIN CONNECTORS

| Standard 7pin | /Z option 12pin | SIGNAL | TECHNICAL SPECIFICATIONS | NOTES |
|---------------|-----------------|-----------|--|------------------------|
| A | 1 | V+ | Power supply 24 Vdc for solenoid power stage (and for driver logic on 7 pin connection) | Input - power supply |
| B | 2 | V0 | Power supply 0 Vdc for solenoid power stage (and for driver logic on 7 pin connection) | Gnd - power supply |
| C (option /Q) | 3 | ENABLE | Enable (24 Vdc) or disable (0 Vdc) the driver | Input - on/off signal |
| D | 4 | INPUT+ | Reference analog input: ±10 Vdc / ±20 mA maximum range software selectable | |
| E | - | INPUT - | Default setting for single solenoid valves: 0÷+10 Vdc, differential input /Z and /W options: common mode INPUT+ referred to AGND | Input - analog signal |
| C | 5 | AGND | Ground - signal zero for MONITOR signal (INPUT+ signal only for /Z and /W options) | Gnd - analog signal |
| F | 6 | MONITOR | Monitor analog output: 0÷+10 Vdc maximum range; Default setting 1V = 1A | Output - analog signal |
| - | 7 | NC | do not connect | |
| - | 8 | MONITOR 2 | 2nd monitor analog output: ±5 Vdc maximum range (only for /W option) | |
| - | 9 | VL+ | Power supply 24 Vdc for driver logic | Input - power supply |
| - | 10 | VLO | Power supply 0 Vdc for driver logic | Gnd - power supply |
| - | 11 | FAULT | Fault (0 Vdc) or normal working (24 Vdc) | Output - on/off signal |
| G | PE | EARTH | Internally connected to the driver housing | |

Note: A minimum time of 270 to 340 ms have to be considered between the driver energizing with the 24Vdc power supply and when the valve is ready to operate. During this time the current to the valve coils is switched to zero.

10.2 ELECTRONIC CONNECTIONS - 5 PIN COMMUNICATION AND PRESSURE TRANSDUCER CONNECTORS

| | -PS Serial | -BC CANopen | -BP PROFIBUS DP | /W pressure connector |
|-----|------------|------------------------|-----------------|-----------------------|
| PIN | SIGNAL | TECHNICAL SPECIF. | SIGNAL | TECHNICAL SPECIF. |
| 1 | NC | do not connect | CAN_SHLD | Shield |
| 2 | NC | do not connect | NC | do not connect |
| 3 | RS_GND | Signal zero data line | CAN_GND | Signal zero data line |
| 4 | RS_RX | Receiving data line | CAN_H | Bus line (high) |
| 5 | RS_TX | Transmitting data line | CAN_L | Bus line (low) |

11 SOFTWARE TOOLS

The driver configuration and parameters can be easily set with the Atos E-SW programming software, available in three different versions according to the driver's communication execution: E-SW-PS (Serial), E-SW-BC (CANopen) and E-SW-BP (PROFIBUS DP). Programming software E-SW-BC and E-SW-BP, for BC and BP drivers, can be also used to modify the valve's parameterization through the serial communication interface, without disconnecting the valve from the machine's bus line.

For a more detailed description of software interface, PC requirements, adapters, cables and terminators, please refer to technical table G500.

Programming software, must be ordered separately:

E-SW-* (mandatory - first supply) = Dvd including E-SW-* software installer and operator manuals; it allows the registration to Atos digital service
E-SW-*N (optional - next supplies) = as above but not allowing the registration to Atos digital service

On first supply of the E-SW-* software, it is required to apply for the registration in the Atos download area: www.download.atos.com.

Once the registration is completed, the password will be sent by email.

The software remains active for 10 days from the installation date and then it stops until the user inputs his password.

With the password you can also download, in your personal area, the latest releases of the Atos software, manuals, drivers and configuration files.



12 MAIN CHARACTERISTICS OF PROPORTIONAL FLOW VALVES TYPE QVHZO-A* AND QVKZOR-A*

| | | | | | | | |
|----------------------------------|--|-----------|-------------|-------------|-------------|--|--|
| Assembly position | Any position | | | | | | |
| Subplate surface finishing | Roughness index, $\sqrt{q^4}$ flatness ratio 0,01/100 (ISO 1101) | | | | | | |
| Ambient temperature | -20°C ÷ +70°C for -A executions; -20°C ÷ +60°C for -AE and -AES | | | | | | |
| Fluid | Hydraulic oil as per DIN 51524 ... 535 for other fluids see section [1] | | | | | | |
| Recommended viscosity | 15 ÷ 100 mm²/s at 40°C (ISO VG 15-100) | | | | | | |
| Fluid contamination class | ISO 18/15 achieved with in line filters of 10 µm and $\beta_{10} \geq 75$ (recommended) | | | | | | |
| Fluid temperature | -20°C +60°C (standard and /WG seals) -20°C +80°C (/PE seals) | | | | | | |
| Valve model | QVHZO-A* with 12 V _{dc} coil with 6 V _{dc} coil with 18 V _{dc} coil with 12 V _{dc} coil with 6 V _{dc} coil with 18 V _{dc} coil | | | | | | |
| Coil resistance R at 20°C | 3 ÷ 3,3 Ω | 2 ÷ 2,2 Ω | 13 ÷ 13,4 Ω | 3,8 ÷ 4,1 Ω | 2,2 ÷ 2,4 Ω | | |
| Max. solenoid current | 2,2 A | 2,75 A | 1,2 A | 2,6 A | 3,25 A | | |
| Max. power | 30 Watt | | | 35 Watt | | | |
| Protection degree (CEI EN-60529) | IP65 for -A executions; IP67 for -AE and -AES | | | | | | |
| Duty factor | Continuous rating (ED=100%) | | | | | | |

13 **DIAGRAMS** (based on mineral oil ISO VG 46 at 50 °C)

13.1 Regulation diagrams

- 1** = QVHZO-*06/3
- 2** = QVHZO-*06/12
- 3** = QVHZO-*06/18
- 4** = QVHZO-*06/36
- 5** = QVHZO-*06/45
- 6** = QVKZOR-*10/65
- 7** = QVKZOR-*10/90

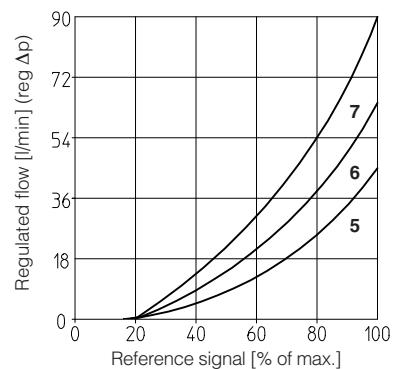
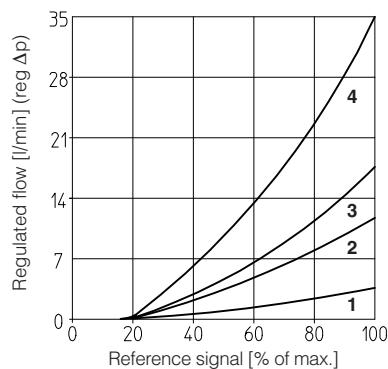


13.2 Regulated flow/outlet pressure diagrams

with inlet pressure = 210 bar



- 1** = QVHZO-*
- 2** = QVKZOR-*


Dotted line for 3-way versions

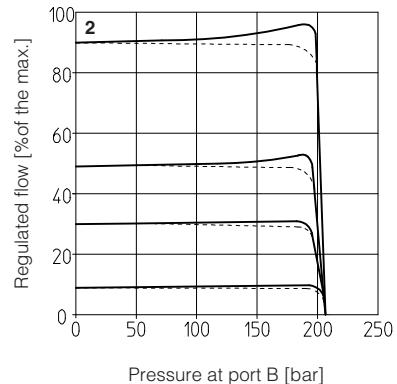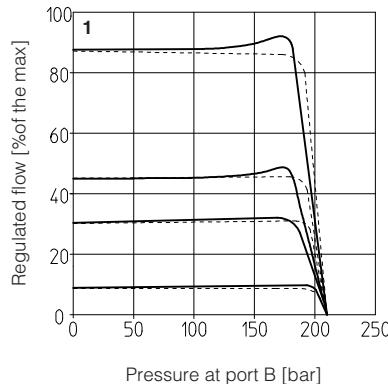

13.3 Flow A→P/Δp diagrams
3-way configuration

- 1** = QVHZO-*06/3
QVHZO-*06/12
- 2** = QVHZO-*06/18
QVHZO-*06/36
- 3** = QVHZO-*06/45
- 4** = QVKZOR-*10/65
- 5** = QVKZOR-*10/90

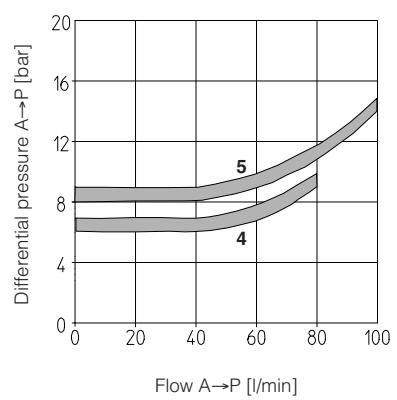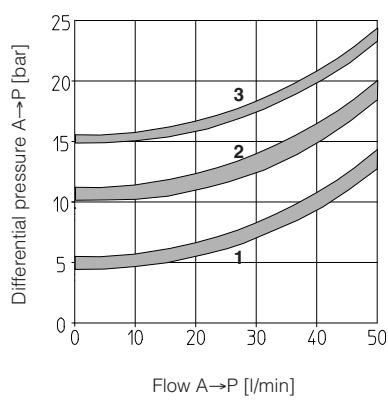

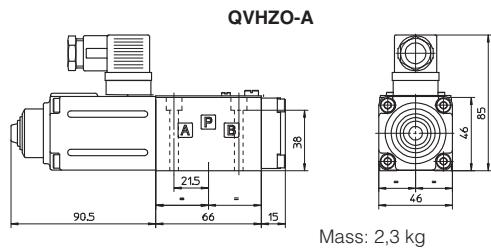QVHZO-A*

ISO 4401: 2005

Mounting surface: 4401-03-02-0-05 (see tab. P005)


Fastening bolts: 4 socket head screws M5x50 class 12.9

Tightening torque = 8 Nm


Seals: 4 OR 108;

Diameter of ports A, B, P, T:

Ø 7.5 mm (max)

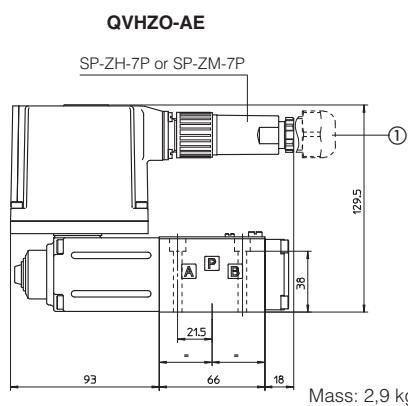

① Dotted line = 12 poles connector SP-ZH-12P for option /Z

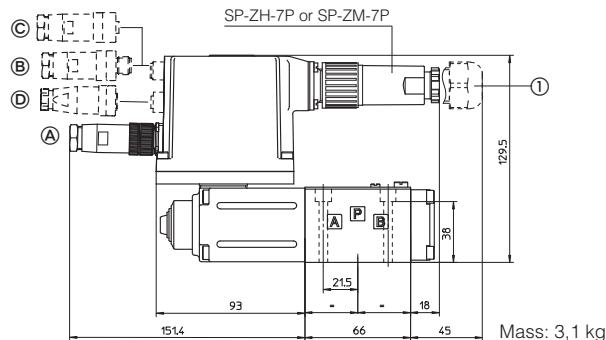
QVHZO-AES

Ⓐ -PS communication interface, SP-ZH-5P connector

Ⓑ -BP communication interface, SP-ZH-5P/BP connector (only for -AES)

Ⓒ -BC communication interface, SP-ZH-5P connector (only for -AES)

Ⓓ Pressure transducer interface (option /W), SP-ZM-5PM connector

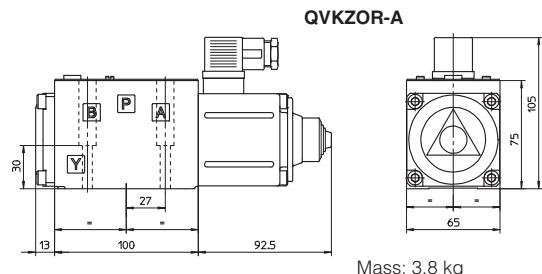QVKZOR-A*

ISO 4401: 2005

Mounting surface: 4401-05-04-0-05 (see tab. P005)


Fastening bolts: 4 socket head screws M6x40 class 12.9

Tightening torque = 15 Nm


Seals: 5 OR 2050;

Diameter of ports A, B, P, T:

Ø 11.2 mm (max)

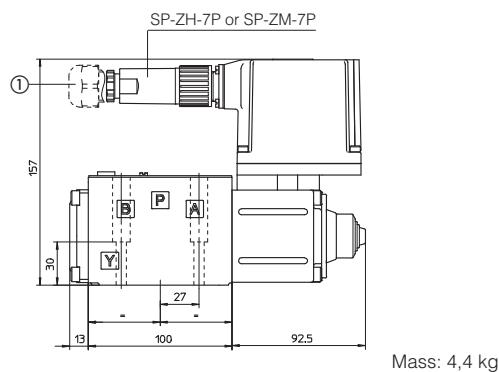QVKZOR-AE

① Dotted line = 12 poles connector SP-ZH-12P for option /Z

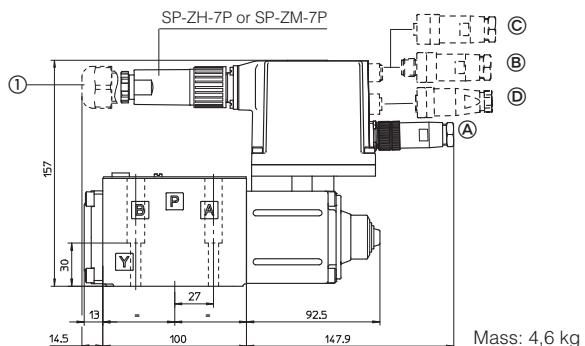QVKZOR-AES

Ⓐ -PS communication interface, SP-ZH-5P connector

Ⓑ -BP communication interface, SP-ZH-5P/BP connector (only for -AES)

Ⓒ -BC communication interface, SP-ZH-5P connector (only for -AES)

Ⓓ Pressure transducer interface (option /W), SP-ZM-5PM connector

15 MODEL CODES OF POWER SUPPLY AND COMMUNICATION CONNECTORS (to be ordered separately)

| VALVE VERSION | -A | -AE, -AES | | -AES/Z, /W | -AES/W (transducer) | -Serial (-PS) or CANopen (-BC) | PROFIBUS DP (-BP) |
|-------------------|--------|------------------------|----------|------------|---------------------|--------------------------------|-------------------|
| CONNECTOR CODE | SP-666 | SP-ZH-7P | SP-ZM-7P | SP-ZH-12P | SP-ZH-5PM | SP-ZH-5P | SP-ZH-5P/BP |
| PROTECTION DEGREE | IP65 | IP67 | IP67 | IP67 | IP67 | IP67 | IP67 |
| DATA SHEET | K500 | G110, G115, G120, K500 | | | | G115, K500 | |

connectors supplied with the valve